


FLASHING ARROW PANEL TYPES


PANEL TYPE	MINIMUM SIZE (W x H INCHES)	MINIMUM LEGIBILITY DISTANCE (MILES)	MINIMUM NUMBER OF ELEMENTS
A	48 X 24	1½	12
B	60 X 30	¾	13
C	96 X 48	1	15

FLASHING ARROW PANEL MODES


FLASHING ARROW
RIGHT LANE CLOSURE

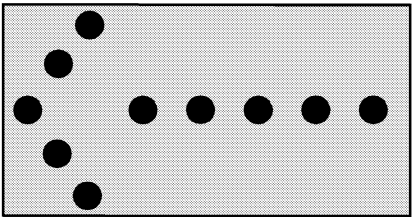


FLASHING ARROW
LEFT LANE CLOSURE

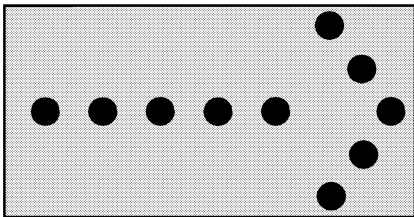


FLASHING DOUBLE ARROW
CENTER LANE CLOSURE

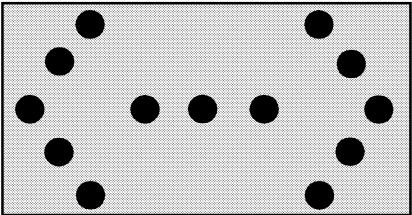

FLASHING
CAUTION MODE

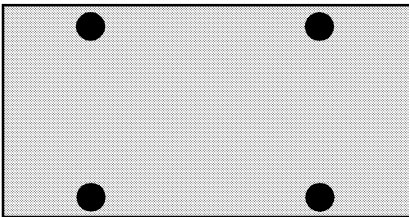

TYPICAL FLASHING ARROW PANEL

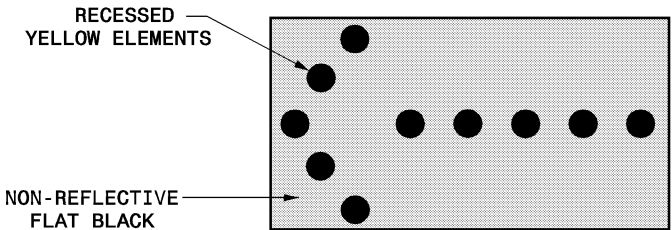

GENERAL NOTES

- 1-DO NOT USE STRAIGHT LINE CAUTION DISPLAYS.
- 2-TYPE "A" ARROW PANELS ARE FOR USE ON LOW SPEED URBAN STREETS (35 MPH OR LESS). TYPE "B" ARROW PANELS ARE TO BE USED ON 35-50 MPH, AND FOR MAINTENANCE OR MOBILE OPERATIONS ON HIGH SPEED ROADWAYS. TYPE "C" ARROW PANELS ARE TO BE USED ON HIGH SPEED (55 MPH AND GREATER), OR HIGH VOLUME ROADWAYS.
- 3-USE A MINIMUM MOUNTING HEIGHT OF 7 FEET FROM GROUND LEVEL TO THE BOTTOM OF THE PANEL FOR TRAILER-MOUNTED ARROW PANELS, EXCEPT ON VEHICLE-MOUNTED PANELS WHICH SHOULD BE AS HIGH AS PRACTICAL.
- 4-USE ARROW PANEL ELEMENTS CAPABLE OF A MINIMUM 50 PERCENT DIMMING FROM THEIR FULL RATED LAMP VOLTAGE. USE FULL LAMP VOLTAGE DURING THE DAY, AND USE THE DIMMED MODE AT NIGHT.
- 5-DO NOT USE ARROW PANELS IN FLASHING ARROW MODE ON A TWO-LANE, TWO-WAY ROADWAY DURING A ONE LANE OPERATION, NOR ON MULTILANE ROADWAYS WHEN SHIFTING ALL TRAFFIC LANES LATERALLY.